

Citroen Berlingo / Peugeot Partner 2008 Onwards

Fiat Doblo 2000 Onwards

Vauxhall Combo E 2002 Onwards / Toyota Proace City 2019 Onwards

## BARN DOORS COVER – BLACK/GREY 509


**1 - Open the vehicle barn doors wide ready for installation.**



**2 – Attach 1 side of the cover to the vehicle using the bulldog clips supplied (Make sure the SHORTER straps are closest to the vehicle).**



**3 – Lift and place the rest of the cover over the top of the doors and attach the shorter straps on each side to the doors (part way down the doors, where the cut-outs are for the rear lights) using the hooks attached.**

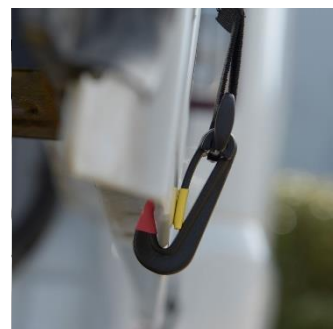

**4 – Attach the longer straps on each side to the bottom of each door to secure in place using the hooks attached.**

