



**UK Custom Covers<sup>®</sup>**  
Custom Designs For Ultimate Protection


**BB674UKCC**

**VAUXHALL VIVARO (2001-2014) / RENAULT TRAFIC (2001-2014) /  
NISSAN PRIMASTAR (2001-2014) - FULL BONNET BRA - 674**

**IMPORTANT:**

**Prior to fitting please ensure the bonnet bra is at room temperature (at least 24 degrees) for 12 hours. Failure to do so could cause damage to the bonnet bra. UK Custom Covers are unable to take responsibility for any damage caused to the bonnet bra if these fitting instructions are not followed.**

**Open the bonnet hood and fit the bonnet bra corners first (As pictured to the right)**

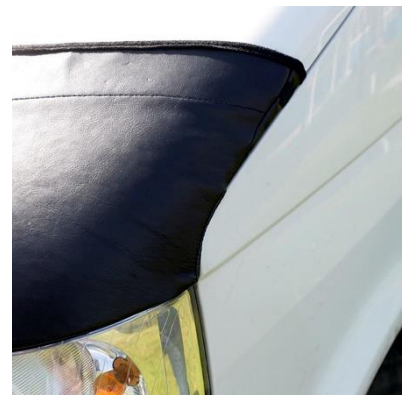

**Now attach each of the hooks (on the elastics) to the available fixing points on the under side of the bonnet hood (As pictured to the right)**

