

# UK Custom Covers

Custom Designs For Ultimate Protection

BDC618UKCC


**Citroen Nemo / Peugeot Bipper/ Fiat Fiorino  
(2008 Onwards)**

## **BARN DOORS COVER – 618**


**1 - Open the vehicle barn doors wide ready for installation.**



**2 – Attach 1 side of the cover to the vehicle using the bulldog clips supplied (Make sure the SHORTER straps are closest to the vehicle).**

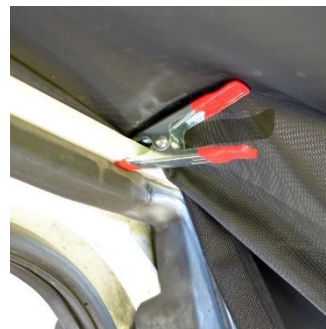

**3 – Lift and place the rest of the cover over the top of the doors and attach the shorter straps on each side to the doors (part way down the doors, where the cut-outs are for the rear lights) using the hooks attached.**

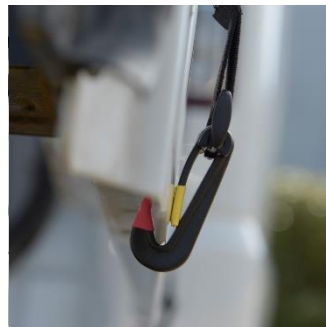

**4 – Attach the longer straps on each side to the bottom of each door to secure in place using the hooks attached.**

