



## Fitting Instructions –

### Nissan Qashqai Quilted Boot Liner 2014 onwards (QBL320UKCC)

Thank you for purchasing your boot liner from our family-run business. Please follow the steps below to install your liner.

#### PART 1 – THE MAIN LINER

##### ***ATTACH THE BASE FIRST ...***

1. Ensure your boot area has the floor installed in the “Low Floor” position
2. Lay the liner in approximate position in the boot of your vehicle. The panel with the Custom Covers label attached sits against the back of the rear seat, facing outward. Neatly align and then press down the Velcro sewn onto the floor section of the liner directly to the carpet on the base.
3. At the tailgate end where the liner meets the rear of the vehicle, attach 6 of the 4” lengths of Velcro strips supplied, to the Velcro strips sewn onto the tailgate of the liner (see sketch A). Attach these directly to the tailgate trim, using the liner as your guide.

##### ***NOW FOR THE BACK OF THE SEATS ...***

4. At the top of the seat area of the liner there are lengths of material. Attach each of these around each headrest pole and secure back on to itself.

##### ***NOW THE SIDES ...***

5. Carefully position the side panels neatly into place, the Velcro sewn onto the sides of the liner will attach directly to the carpet.

#### PART 2 – REMOVEABLE BUMPER FLAP

6. Match the “hook” Velcro on the removable bumper flap to the “loop” Velcro on the main liner near the tailgate.


**PLEASE NOTE: YOU MUST UNFASTEN THE VELCRO HEADREST STRAPS BEFORE PLACING THE REAR SEATS FORWARD**

### IMPORTANT GENERIC PREPARATION NOTES

Before attaching the self-adhesive Velcro to any car plastics/metal trim (NOT carpet); it is very important to remove any silicone film from the trim to ensure a good bond. Silicone is found in many valeting products and is also applied during manufacture. To remove any silicone build up the surface must be thoroughly cleaned using a silicone remover, we recommend 'Intensive tar remover' made by AutoGlym however a white spirit will also work just as well. Leave the area to dry for 10 minutes and wipe off any residue with a dry clean cloth after cleaning before applying the self-adhesive Velcro. ONCE THE VELCRO HAS COME INTO CONTACT WITH SILICONE RESIDUE IT CANNOT BE REUSED. THE VELCRO ADHESIVE TAKES 24HRS TO REACH FULL ADHESION.

#### **SKETCH A**

**■ = INDICATES AREAS WHERE A 4" ADHESIVE-BACKED VELCRO PIECE NEEDS TO BE APPLIED**

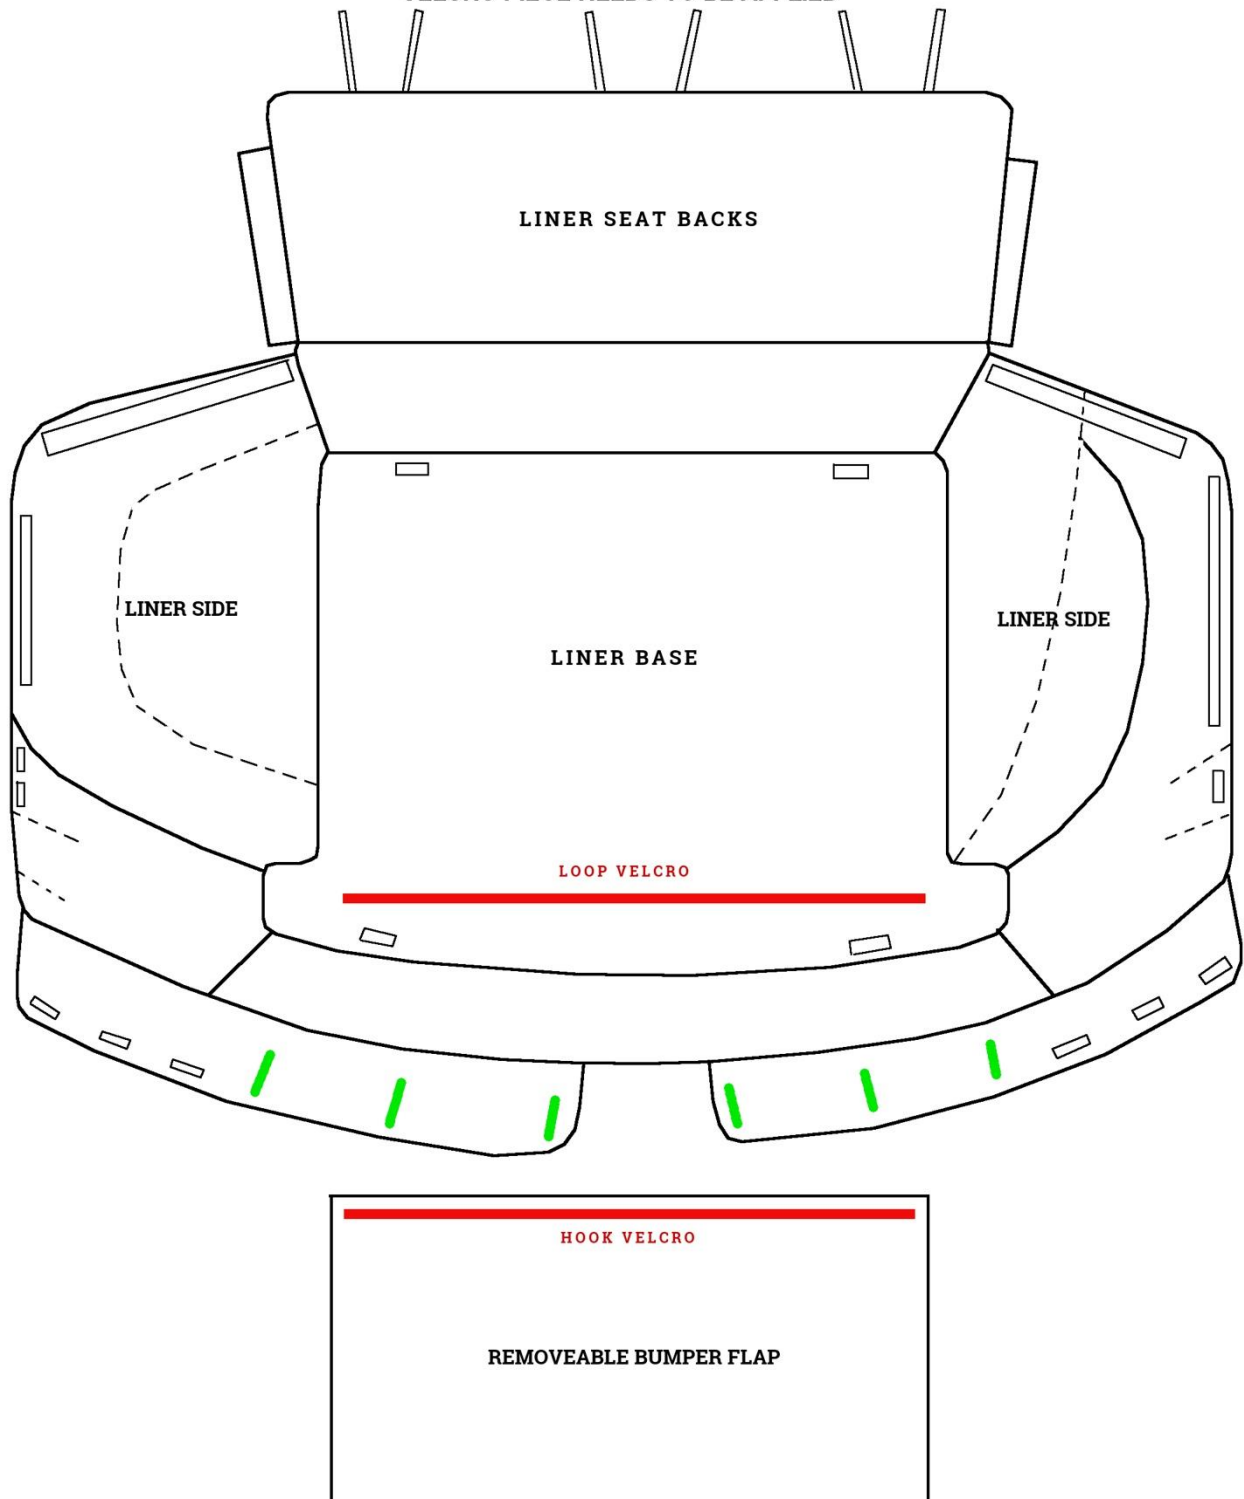

Velcro Fixing Kit – 24" length supplied, please cut to required lengths